

Justice Design Group

Installation Instructions

Wall Sconces

For FAL Models: 0945, 1005, 1265, 1300, 1355, 1490, 1495, 1555, 1800, 2225, 2500, 4200, 4210, 4705, 5120, 5135, 5140, 5725, 8810, 8811, 8855, 8857, 8858

For CNDL Models: 8855

IMPORTANT

- Justice Design recommends that a licensed electrician install this lighting fixture
- Installation must comply with all building, safety, and electrical codes and requirements
- Disconnect power to the junction box prior to installation
- Do not reconnect power until this fixture is properly installed
- This fixture is designed to mount to a standard metal 4-0 octagonal junction box

Hardware Pack contains:

- A. 1 - Brass Knurled Nut
- B. 1 - Lock Washer
- C. 1 - Metal Washer
- D. 1 - Rubber Washer
- E. 2 - Mounting Screws
- F. 2 - Wire Nuts
- F. 1 - Mounting Plate
- G. 1 - Nipple

A.



D.



G.



B.



E.




C.



F.




F.

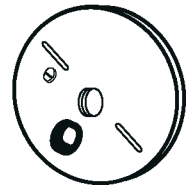


1

Thread Nipple into Mounting Plate. Leave enough length to insure Nipple will protrude through back of fixture.

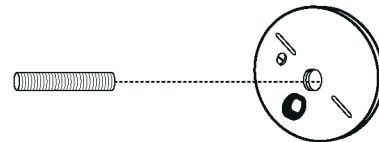

2


Pull fixture wires through hole with black plastic bushing on Mounting Plate. Connect fixture wires to supply wires using wire nuts (not included). Observe polarity: black to power, white to neutral, and bare copper to green ground.

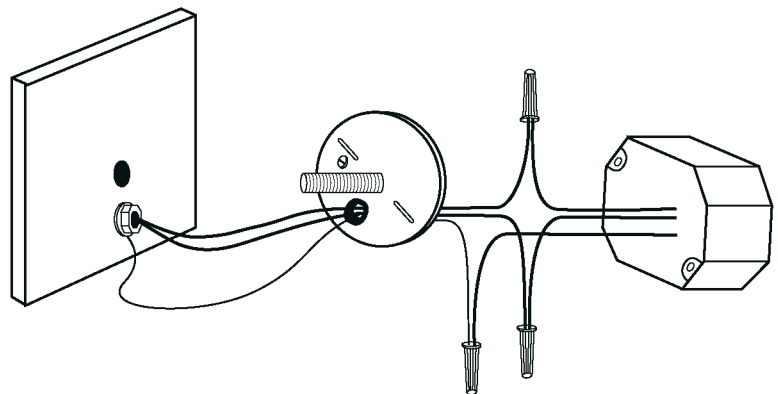

Wall sconces

3

Tuck wires and wire nuts into junction box. Attach Round Mounting Plate to junction box using Mounting Screws.

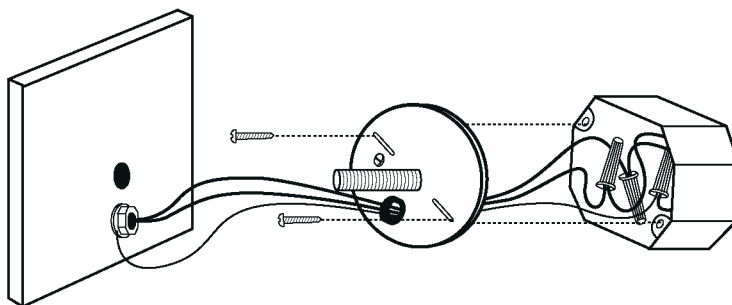

4

Place fixture over Nipple and secure using Rubber Washer (to cushion), Metal Washer (to spread force), Lock Washer (to prevent loosening), and Knurled Nut (to secure). Be careful not to overtighten Knurled Nut or you may damage fixture.

Please see the additional enclosed sheet for care instructions.

